



Uniwand for Venetian Blinds With Child Safety Cleats

This control mechanism is available at additional cost. It gives a neat single wand-control for lifting, lowering, and tilting the blind. It can be located on the left or right. It is made from with transparent acrylic. It eliminates the need for free hanging cords.

If you want to lower your blind, pull the acrylic wand down and the blind will lower.

To pull the slats up, pull the cords to the desired position.